

burtonsafes.co.uk



LOCKING INSTRUCTIONS

BURTON PULSE DEAD BOLT

UK C€

LOCKING INSTRUCTIONS

BURTON PULSE - DEAD BOLT

ABOUT THE LOCK

This lock requires a 6-digit code to open the lock. You can have 2 different codes on this lock, the master code and the secondary code. This lock can also have a time delay activated of 1-99 minutes and an open period of 1-19 minutes.

How to open the safe

- Enter a valid 6-digit code (the factory default is '123456')
- If the code has been entered correctly the lock will beep twice
- Turn the keypad clockwise until it stops
- Turn the handle to the open position
- Open the safe door

Incorrect Entry

- If an incorrect code has been entered, it will be followed by a long beep
- After 4 incorrect entries, a penalty time of 5 minutes will begin. During this time, no other code entries can be made
- When the penalty time is over enter a valid 6 digit code

How to close the safe

- Ensure that the bolts are fully retracted (if necessary rotate the handle clockwise to retract the bolts)
- Gently push the door shut. Always ensure that there are no objects or people in the way of the closing door
- Turn the handle bar anti-clockwise until the stop position is reached
- Turn the keypad to the upright position

Activating the secondary code

(using the master code)

- Press and hold key [1] until the lock beeps twice
- Enter the 6-digit MASTER code
- Now enter a 6-digit code for the SECONDARY code; the lock will beep twice
- Enter the 6-digit code for the secondary code again to confirm. The lock will beep twice and the code is set

Deleting the secondary code (using the master code)

- Press and hold key [3] until the lock beeps twice
- Enter the 6-digit master code
- The secondary code is now deleted

Changing your code

- Unlock and open the safe door
- Press and hold key [0] until the lock beeps twice
- Enter the current 6-digit code of the user you wish to change (master or secondary) the lock will beep twice
- Now enter the new 6-digit code, the lock will beep twice
- Enter the new 6-digit code again to confirm; the lock will beep twice.

NOTE: if there are any code entry errors, they will be followed by a long beep. The old code will remain valid and you can repeat the steps.

Programming the time delay and open window

A time delay is the time you have to wait in between the entry of your code and the opening of your safe. An open window is the amount of time you have to open your safe. For example, if you wanted a 30 minute time delay and a 10 minute open window, this would mean that once you have entered a valid 6-digit code, you have to wait 30 minutes before you can open the safe door. After 30 minutes you will have 10 minutes to open the safe door. If you wait longer than 10 minutes, you have to start the process again.

- Press and hold key [9] until the lock beeps twice
- Enter the 6-digit master code
- Now enter the desired time delay and open window length, i.e. for a 30 minute time delay and 10 minute open window, enter: 3010
- The lock will beep twice
- Enter the time delay and open window again to confirm. The lock will beep twice.

How to open the safe with the time delay active

- Enter a valid 6-digit code. If the code is entered correctly, the lock will beep twice
- When the time delay begins, the LED will flash every 2 seconds
- Once the time delay ends the open window will begin.
 During the open window, the lock will beep once every 2 seconds
- During this time, turn the handle to the open position and open the safe door

How to change / remove the time delay active

- Enter a valid 6-digit code, if the code is entered correctly the lock will beep twice
- When the time delay begins the LED will flash every 2 seconds
- Once the time delay ends the open window will begin
- During the open window, follow the steps of programming the time delay to change time length
- To remove the delay, you need to enter 0001 for the time delay and open window

Current supply / battery change

A series of beeps indicates that the battery is weak and must be replaced. Only use a 9V ALKALINE battery. (Burton Safes recommend the Duracell brand). The batteries are located in the bottom of the lock. Remove the battery cover and carefully take out the battery. Unclip the wire and replace the battery. Take care when changing batteries to ensure that no cables are damaged.

How to turn on the light

Press the [OK] key and the LED will turn on. After 10 seconds the light will turn off automatically.

Installation Guidelines for Freestanding Safes



When fixing your safe, it is important that it is fitted against a solid wall or concrete floor. Follow our guide below and for more information and guidence visit our website.

Fixing guide



Mark a drill point using the fixing hole in the safe



Drill a hole for the bolt 18mm diameter 155mm depth



Clean out dust and debris



Line up the safe and insert the bolt. Tap the bolt in with a hammer.



Tighten the bolt with a torque wrench

SAFE FOR LONGER



5 YEAR CONSUMER WARRANTY BADGE

All our safes come with a 2 year warranty as standard. Consumers can register online to increase the warranty to 5 years where products show the 5 Year Consumer Warranty badge.



FREE REPLACEMENT IN THE EVENT OF BURGLARY BADGE

Security Safes displaying the Home series Safe For Longer free replacement badge benefit from the 5 year warranty and a free replacement in the event of burglary.



FREE REPLACEMENT IN THE EVENT OF BURGLARY OR FIRE BADGE

Fire and security safes displaying the Home Series Safe For Longer badge benefit from the 5 year warranty and a free replacement in the event of burglary or a fire.

Please register online to qualify for the additional warranty at: www.burtonsafes.co.uk

Terms and conditions apply



www.burtonsafes.co.uk

Products

Home Safes

High Security Safes

Fire Safes

Key Safes

Gun Cabinets & Safes

Luxury & Design Safes

Garage & Door Security

Security Doors

Panic Rooms

Secure Your Valuables with a Burton Safe









THE SURE DEFENCE

www.burtonsafes.co.uk +44 (0) 1484 663388 enquiries@burtonsecurity.com

Brockholes Business Park, Rock Mill Road, Holmfirth, HD9 7BN

